# Instruction of Proximity Sensor

- This product sends signals to Daytona speedometers.
- To calibrate the speed, go to “Auto Calibration Mode” of VELONA or ASURA speedometers.
  (See Instruction of VELONA or ASURA)

## Wiring Diagram

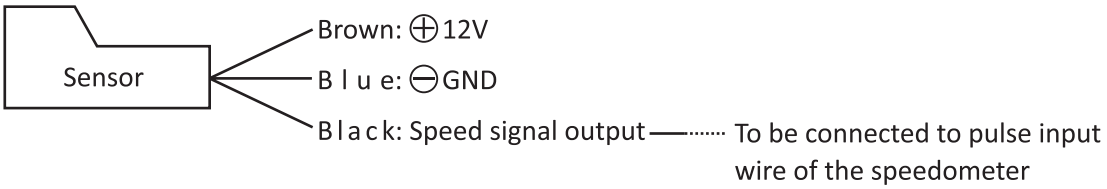


## Installation

★Need to make a special bracket to mount the sensor on an appropriate place.
★Place the sensor near the screw head of the brake disc rotor, driven sprocket or something that rotates as the bike runs.
★The stable sensing range is 1-3mm. Keep 1-3mm distance between the sensor and the screw head as per the picture #1.

Picture #1

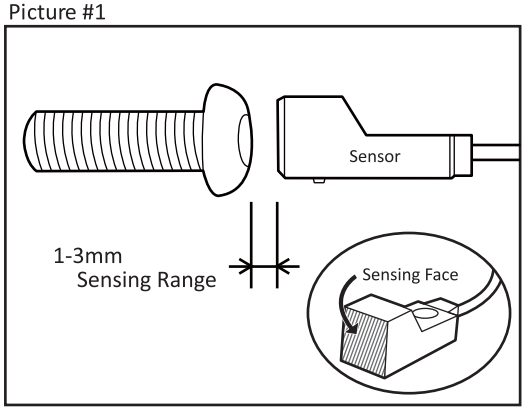


Example

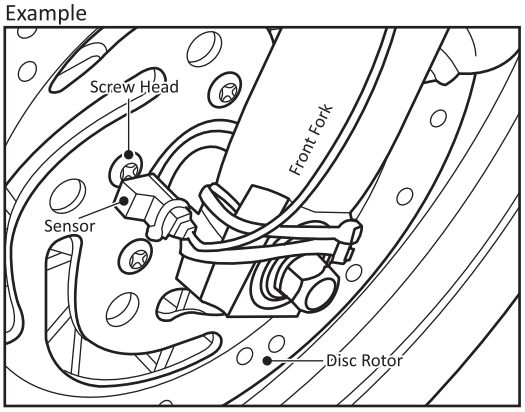


## ⚠ caution

Be sure that sensor and/or bracket are firmly fixed on the bike, and that it will not contact any other moving/rotating objects.
Mismounting of the sensor and/or bracket may cause serious injury or damage.